


Chemonite® Wood

Protecting Douglas fir & other species
from wood's natural enemies

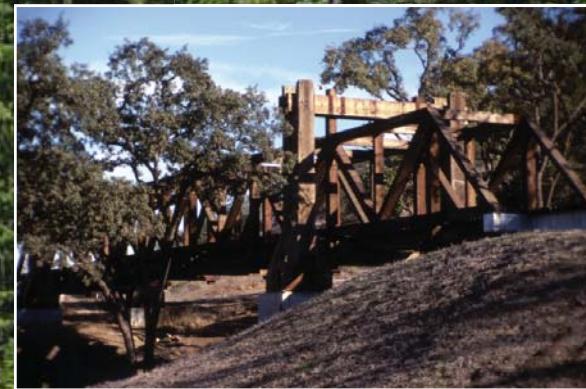


CHEMONITE® ACZA
PRESSURE-TREATED WOOD

Overview

Chemonite® is the registered trade name for wood protected by ACZA, ammoniacal copper zinc arsenate, against termites and fungal decay. The treatment was originally developed, and remains today, as a waterborne system which can consistently meet recognized standards of penetration and retention in otherwise difficult-to-treat wood such as coastal Douglas fir.

Chemonite® wood has been safely and successfully used since the 1940's in commercial and industrial applications. It is leach-resistant in water and ground.

Chemonite® wood offers all of the appealing characteristics of wood along with prolonged service life. It is protected against the major causes of

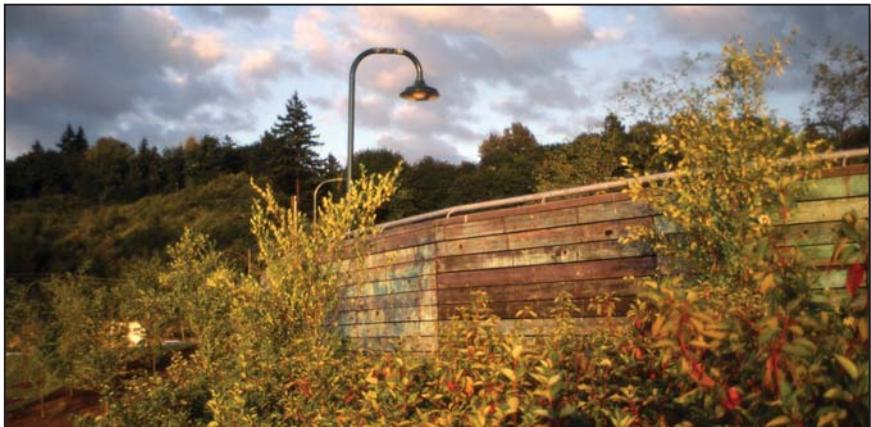

wood degradation: fungal decay, termites, and marine organisms, and studies indicate resistance to carpenter ants, woodpeckers, and fire. It has protection both above ground and in ground contact, as well as in fresh and salt water.

Applications

Chemonite® wood is especially appropriate for industrial, utility, marine, and heavy construction applications, where coastal Douglas fir or other refractory species are used, or where longevity is a concern. Typical applications include:

- Utility poles — distribution & transmission
- Building poles
- Foundation piling
- Marine piling — fresh or salt water
- Sawn timbers or supporting columns used for bridges, barns, homes, or other uses.
- Agricultural posts
- Post frame construction
- Highway construction
- Railroad crossties



CHEMONITE® ACZA
PRESSURE-TREATED WOOD

Advantages

- Protects against fungal decay and insect attack, even Formosan termite.
- Preserved with ammoniacal copper zinc arsenate (ACZA).
- Effectively penetrates coastal Douglas fir.
- Long history of successful use.
- Studies indicate resistance to carpenter ants, woodpecker damage, and fire.
- Provides protection at all levels of exposure — above ground, ground contact, fresh water and salt water.
- May be stored, handled, and worked like untreated wood.
- Recognized by model building codes.
- Leach-resistant.
- Can be painted or stained.
- Leaves surface free of chemical deposits.

Use & Handling

Construction: Bracing with round timber piles rather than sawn timbers is recommended for marine construction below high tide. All untreated



wood exposed by cutting or drilling should be adequately field-treated. Avoid removing the outer shell of wood where treatment is heaviest and resistance greatest. It is recommended that all structures be prefabricated before treatment; minimize problems by specifying framing and boring before treatment whenever possible.

Worker Safety: Chemonite® wood can be stored, handled and worked like untreated wood. As with any wood, wear gloves to avoid splinters, wear eye protection and a dust

mask when sawing, drilling and sanding. Wash hands before eating or smoking. Dispose of cut ends in a proper landfill. Treated wood should not be burned in open fires or in stoves, fireplaces or residential boilers. Treated wood from commercial or industrial use may be burned only in commercial or industrial incinerators or boilers in accordance with state and federal regulations.



Standards & Codes

ACZA is listed in the American Wood Protection Association (AWPA) Standard P5 for Waterborne Preservatives. Wood treated with this preservative is accepted in AWPA Standard U1 for applications in Use Categories 1 through 5, that is, from interior applications to salt water immersion. Within the requirements of the standards, ACZA can be used to treat numerous species of wood, however its ability to penetrate makes it particularly useful in the treatment of coastal Douglas fir, for which it is most commonly used.

AWPA standards are referenced in government specifications and model building codes for treated wood products.

Chemonite® wood also qualifies under Canadian Federal (CSAK) Specifications.

Best Management Practices (BMPs)

The Western Wood Preservers Institute, in conjunction with industry representatives, users, and scientists, developed BMPs to help insure fixation of preservative chemical in treated wood prior to shipment. In the fixation process, preservative bonds to the wood, making it resistant to leaching. Specification of BMPs results in wood with a very high percentage of fixed preservative, and may also reduce shipping weight.

BMPs have been established for Chemonite® treated wood. Details are available on the WWPI website (www.wwpinstitute.org) or by contacting a producer.





Incising

In many western species, penetration improvement methods are employed to improve the depth and uniformity of preservative penetration into wood. Most commonly this is seen as a pattern of slits ("incisions") on the surface of lumber. Full-length incising and deep-incising are other methods, as are radial-drilling and through-boring, used mostly for poles and piling.

Although these methods can improve preservation, they can result in a strength reduction for the wood, depending on the pattern, size, and number of incisions. When treated sawn wood products have been incised, the reference design values must be multiplied by the incising factor, C_i , in accordance with section 4.3.8 of the National Design Specification for Wood Construction. A review of penetration improvement methods is recommended before insertion into a specification.

"Treated to Refusal"

This phrase – Treated to Refusal – indicates that the wood was treated under specific conditions until it refused additional preservative, a point below the requirements of industry standards. The result is wood that cannot be relied upon to last as long as wood that meets standards. Such wood does not comply with model building code requirements for treated wood. One reason for substandard material can be use of a preservative

other than ACZA which is not suited for refractory (i.e., difficult-to-treat) species.

To assure yourself of properly treated wood, look for the logo of an ALSC-accredited inspection agency on lumber tags or ink stamps. The logo often appears beside a Checkmark symbol.

Recommended Hardware

Hot-dipped galvanized fasteners & connectors are recommended for use with Chemonite® ACZA-treated wood.

- Some hardware manufacturers recommend only stainless steel connectors. We recommend no less than post Hot-Dipped Galvanized, HDG, fasteners (meeting ASTM A 153) and connectors (ASTM A 653 Class G185 sheet), where there is contact with ACZA-treated wood. In all cases, be sure to observe building code requirements.
- In highly corrosive environments — such as exposure to salt air, industrial fumes, fertilizer storage, high humidity, and constant wetting — appropriate stainless steel should be used. For below grade Permanent Wood Foundations, building codes generally require stainless steel.
- Always use the same type metal for assembly of connectors and fasteners as dissimilar metals can accelerate corrosion. Aluminum or electroplated galvanized metals should never be used. These metals are not accepted by the building codes for use in exterior applications.

Douglas fir & other species

For its dimensional stability, high strength-to-weight ratio, nail-holding capability, and other properties, Douglas fir is prized as a structural lumber. It is not easily treated by waterborne preservative systems, but the ammonia and heat used in the ACZA treating process enable Chemonite® preservative to provide effective protection of the wood.

Douglas fir is not a true fir, but comprises several species in their own genus, *Pseudotsuga*. There are differences

among these species and even within them. For some applications, AWPA standards distinguish between coastal Douglas fir (grown between the Pacific Ocean and the summit of the Cascade Mountains) and interior Douglas fir.

ACZA treatment can also effectively protect other species, including red pine, eastern white pine, ponderosa pine, jack pine, spruce, western red cedar, northern white cedar, and lodgepole pine.



ACZA Treated Wood Specification Guide for Commercial, Industrial, and Aquatic Use

		AWPA U1 Standard		Preservative Retention (Lbs. per cu. ft.) ACZA
		Use Category Designation	Commodity Specification	
AGRICULTURE, FARM	Structural Members			
	Round poles and posts	4B	D	.60
	Sawn poles and posts	4B	A	.60
	Posts, Fence			
	Round, half & quarter round	4A	B	.40
	Sawn four sides	4A	A	.40
BUILDING CONSTRUCTION, MARINE AND FRESH WATER	Lumber & Timbers			
	Floor plate	2	A	.25
	Ground contact and fresh water use	4A	A	.40
	Salt water splash	4B, 4C	A	.60
	Subject to tides, waves or in salt water	5A, 5B, 5C	G	2.50
	Permanent Wood Foundation			
	Lumber & plywood	4B	A	.60
	Plywood			
	Sub-floor, damp above ground	2	F	.25
	Exterior, above ground	3B	F	.25
	Ground contact and fresh water use	4A	F	.40
	Salt water splash	4B	F	.60
	Subject to tides, waves or in salt water	5B	G	2.50
	Piling			
	Round piling, marine – severe exposure ¹	5B, 5C	G	2.50
	Round piling, marine – northern waters ²	5A	G	1.50
	Round piling – land & fresh water (Douglas fir)	4C	E	1.00
POLES, UTILITY	Poles, Building			
	Round – structural	4B	D	.60
	Sawn – structural	4B	A	.60
	Glue-Laminated Members, Douglas Fir (treated after gluing)			
	Above ground – interior/exterior	1, 2, 3B	F	.30
	Ground contact & fresh water use	4A, 4B	F	.40, .60
HIGHWAY MATERIAL	POLES, UTILITY		4A, 4B, 4C	D
	Lumber & Timbers			
	Lumber and timbers for bridges, structural members, decking, cribbing, & culverts	4B	A	.60
	Structural Posts & Timbers			
	Round, half-round, quarter round	4A	B	.40
	Sawn	4A	A	.40
CROSSTIES	Posts, Guardrail			
	Round	4A	D	.50
	Sawn	4A	A	.50
		4A	C	.40

¹In 5B and 5C applications where *Sphaeroma tererans*, *Limnoria tripunctata*, and *Toredo* or *pholads* are present, dual treatment is recommended: for solid sawn wood — 1.50 pcf ACZA followed by 20 pcf creosote, and for round piling — 1.00 pcf ACZA followed by 20 pcf creosote.

²Northern waters defined as New Jersey and north on the East Coast and north of San Francisco Bay on the West Coast.


For sensitive environments, specify material treated in compliance with Best Management Practices (see page 4).

FAQs

Frequently Asked Questions

1. What is Chemonite® wood?

Chemonite is the registered trade name for wood protected by ACZA (ammoniacal copper zinc arsenate), a waterborne wood preservative. Pressure treating wood with ACZA protects it against marine borers, insect attack, and decay. First developed at the University of California in the 1920s, the preservative was commercially developed for the treatment of coastal Douglas fir and other hard-to-treat species in the 1940s by J.H. Baxter, a California wood preserving company.

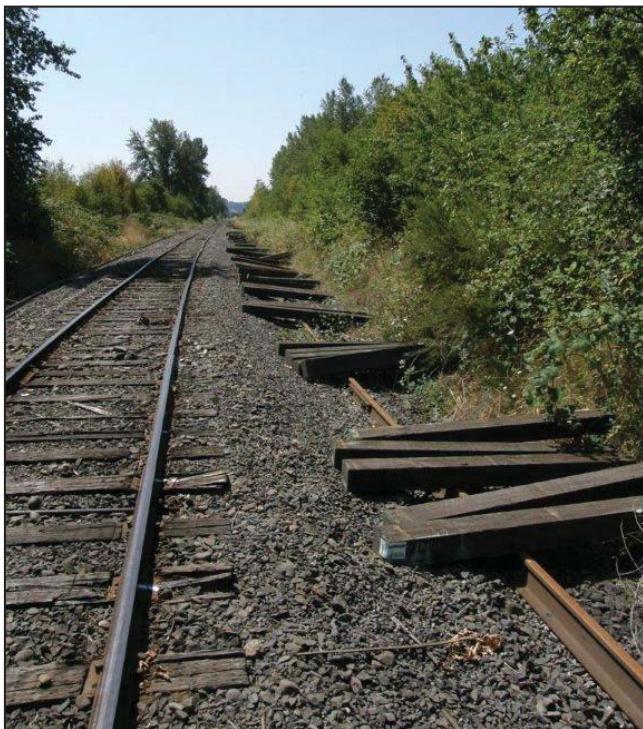

2. How is wood treated with ACZA?

First, tiny cuts called incisions are made in the wood. The wood is loaded on carts and pushed into a large steel cylinder. The cylinder is closed, vacuum is used to remove excess air and moisture from the wood cells, and the ACZA solution is pumped in. Pressure and heat are applied to force the solution deep into the wood cells.

3. Will the chemicals wash out in water or in the ground?

Chemonite wood is very leach resistant. The U.S. Environmental Protection Agency (EPA) has stated that "Arsenicals in treated wood have a very low tendency to leach into the soil..."

6

4. Does ACZA treatment change the color of the wood?

Chemonite treated wood has a dark greenish brown color from the copper compounds in the preservative. But the color is difficult to control. Sapwood will tend to be greenish brown with heartwood tending toward more brownish black. Over time, as the wood weathers, the color becomes more uniform.

5. Does Chemonite wood have an odor?

Only when freshly treated. Once the ammonia evaporates, the treated wood is nearly odorless. (Avoid storing any freshly treated wood in damp, unventilated facilities.)

6. How do I treat "end-cuts"?

Minimize any cutting to obtain the maximum benefit of the treatment by not exposing untreated wood to decay hazards. If you do cut Chemonite treated wood, the exposed areas should be protected by applying copper naphthenate solution or other solution containing at least 1% copper — available at most home centers. Use a generous amount to completely saturate any untreated areas of your project exposed by cutting or drilling.

7. Does Chemonite wood present a safety hazard?

Wood treated with ACZA falls under the U.S. Environmental Protection Agency's (EPA) minimum protective precautions. Other than the normal safety measures suggested for handling any wood (wear gloves when handling, goggles and a dust mask when drilling or sawing), no special handling or clothing is required. See the Consumer Safety Information Sheet on the website.

8. Does ACZA treatment affect the strength of the wood?

The National Design Specification allows the same strength values for treated as for untreated lumber of the same species, grade, and moisture content. However, when incised, the incising factor should be applied.

9. Do nails hold well in Chemonite wood?

Laboratory tests and field experience indicate that nails hold just as well in Chemonite-treated lumber as they do in untreated lumber. For fasteners and connectors, always use hot-dipped galvanized, stainless steel or an approved equal.

10. Can Chemonite wood be painted? If so, how soon after treatment?

Yes. Simply follow the manufacturer's instructions. The wood should be clean and dried to 20% moisture content or less before paint is applied.

11. Does the treatment affect the flamespread rating of wood?

Chemonite wood is slightly more difficult to ignite than untreated lumber. Tests conducted at Underwriters Laboratories Inc. confirm the fire resistant qualities of Chemonite wood:

- Douglas fir lumber treated with 0.35 pc^f of ACZA had a 41.7 flame spread rating, which is a Class B rating.
- Douglas fir lumber treated with 1.86 pc^f of ACZA had a 24.8 flame spread rating, which is a Class A rating.

12. How long will this treated wood last?

Thirty to fifty years or longer in many end uses when treated to AWPA standards and barring any incidental damage.


13. Will Chemonite wood last if it's buried in the ground?

Yes, wood treated to a minimum 0.40 pc^f retention will withstand wood-destroying organisms in ground contact.

14. Is Chemonite wood suitable for aquatic applications?

Yes. Treatment in accordance with AWPA Standards provides a long service life. Specifying that the wood conforms with the Best Management Practices (BMPs) of the Western Wood Preservers Institute ensures that Chemonite wood is suitable for use in aquatic environments.



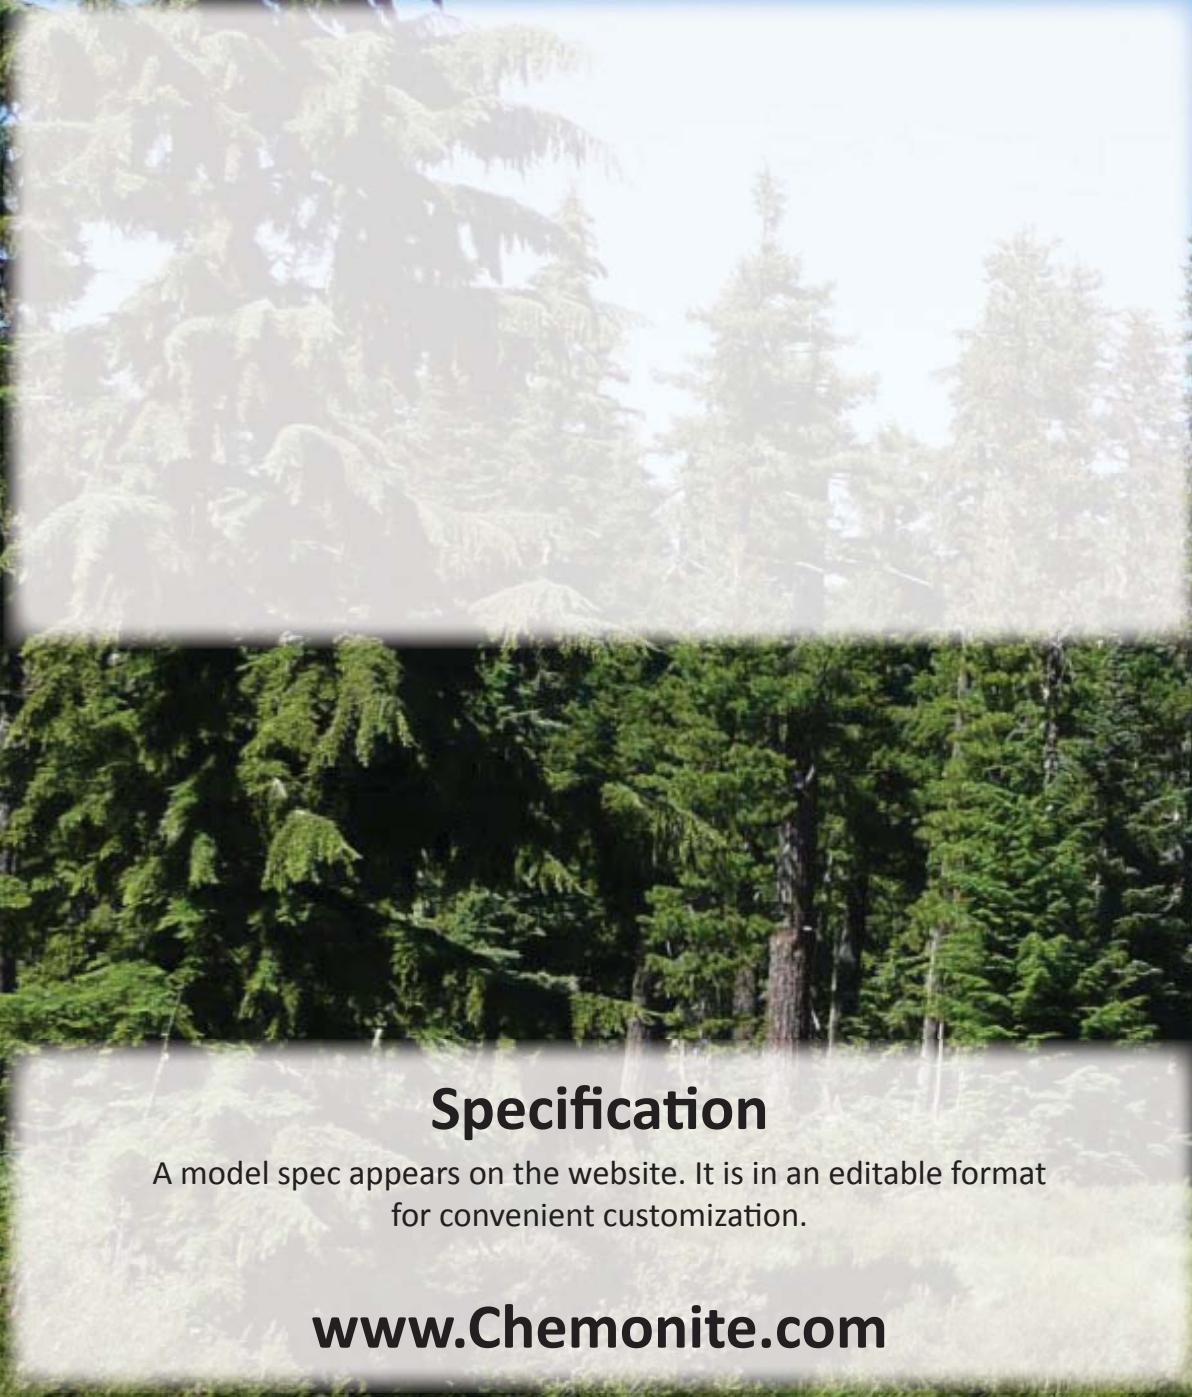

Specification

A model spec appears on the website. It is in an editable format for convenient customization.

www.Chemonite.com

Chemonite is a registered trademark of Arch Wood Protection, Inc.